 


# 3M Digital Easel

---

## Product Safety Guide Including Installation Instructions

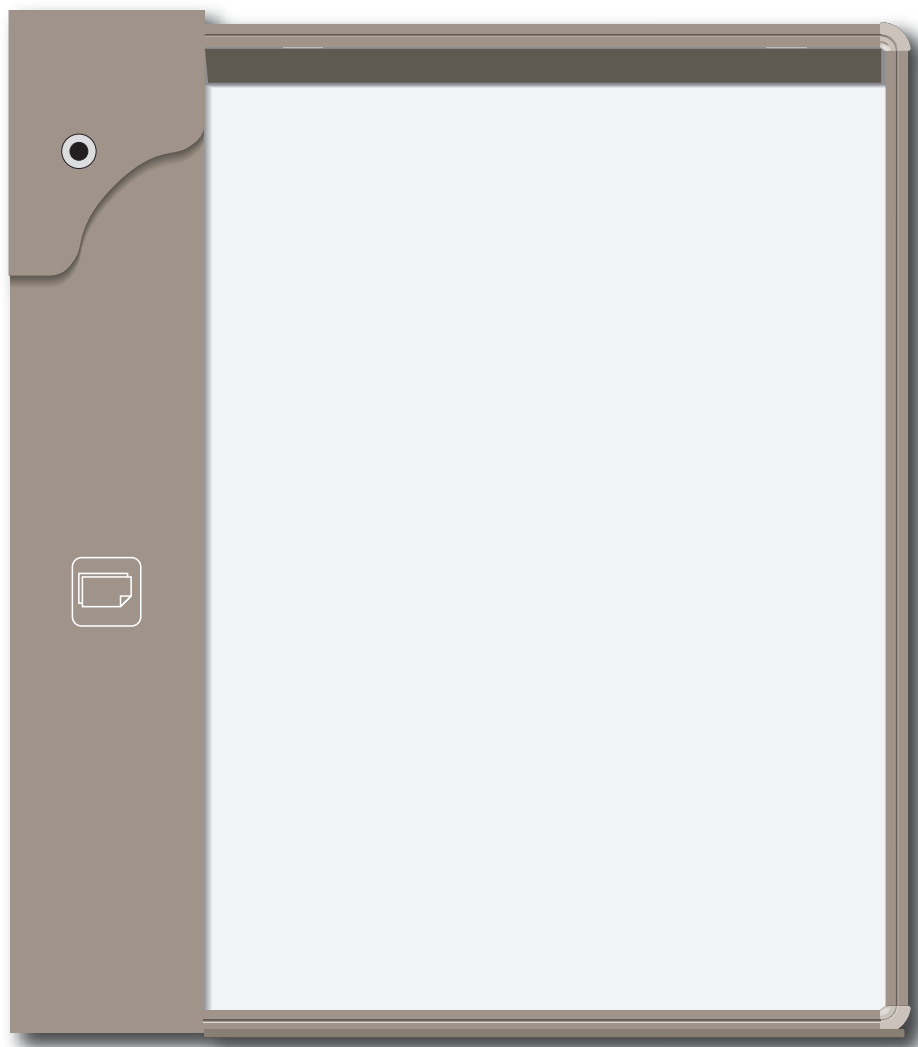



# Safety Information

Please read, understand, and follow all safety information contained in these instructions prior to the use of this 3M™ Digital Easel, model DE343. Retain these instructions for future reference.

## Intended Use

The 3M Digital Easel, model DE343, was designed, and intended for use indoors via a USB data communications cable connected to a desktop or laptop computer. Use in an outdoor operation has not been tested and could damage the easel, peripheral equipment, and/or create a potentially unsafe operating condition. Underwriter's Laboratories has only evaluated this product for wall installation on 1/2 inch drywall minimum. This 3M Digital Easel is not intended for use by unsupervised children.

### Explanation of Signal Words and Symbols in Safety Labels and Instructions

**WARNING:** Indicates a potentially hazardous situation, which if not avoided, could result in death or serious injury and/or property damage.

**CAUTION:** Indicates a potentially hazardous situation, which if not avoided, may result in minor or moderate injury and/or property damage.



**Attention:** Read Accompanying Documentation



Risk from muscular strain—24 lbs. (11 kg)

24 Lbs/11 Kg

### **WARNING**

#### To reduce the risk associated with exposure to hazardous voltage:

- Do not use the 3M Digital Easel in an outdoor and/or wet environment

#### To reduce the risk associated with use of alcohol based cleaners:

- Follow all instructions and recommendations on the product label and Material Safety Data Sheet when using any commercially sold whiteboard cleaner

#### To reduce the risk associated with muscle strain:

- Always use more than one person when installing or removing the 3M Digital Easel

#### To reduce the risk associated with tripping:

- Position the 3M Digital Easel's USB data cable so that it will not be tripped over

#### To reduce the risk associated with the various hazards related to the 3M Digital Easel:

- Please read, understand and follow all safety information contained in this installation manual prior to the installation and use

**⚠ WARNING****To reduce the risk associated with impact:**

- Always provide proper adult supervision when using the 3M Digital Easel around children
- Always place the 3M Digital Easel on a stable and level surface
- Install the 3M Digital Easel on a wall with 1/2 inch thick drywall minimum.
- Use only 3M recommended wall mounting hardware
- Follow all installation instructions carefully
- Make sure mounting screws are properly sized to handle the weight of the 3M Digital Easel
- Make sure mounting hardware is securely anchored to a solid structure
- Proper installation and/or servicing must be preformed by qualified service technicians, as outlined in the installation instructions. Failure to do so could result in serious injury and/or damage to the 3M Digital Easel
- At least two qualified service technicians should perform the installation procedure. Serious personal injury and/or damage can result from dropping the 3M Digital Easel

**To reduce the risk associated with choking:**

- Keep batteries away from children and pets.

**⚠ CAUTION****To reduce the risk associated with impact:**

- Always provide proper adult supervision when using the 3M Digital Easel around children
- Always place the 3M Digital Easel on a stable and level surface
- Install the 3M Digital Easel on a wall with 1/2 inch thick drywall minimum.
- Use only 3M recommended wall mounting hardware
- Follow all installation instructions carefully
- Make sure mounting screws are properly sized to handle the weight of the 3M Digital Easel
- Make sure mounting hardware is securely anchored to a solid structure
- Proper installation and/or servicing must be preformed by qualified service technicians, as outlined in the installation instructions. Failure to do so could result in serious injury and/or damage to the 3M Digital Easel
- At least two qualified service technicians should perform the installation procedure. Serious personal injury and/or damage can result from dropping the 3M Digital Easel

**To reduce the risk associated with choking:**

- Keep batteries away from children and pets.

# Installation

*Note: Photos and/or illustrations may not match exactly the hardware provided.*

## Installing the Wall Bracket

### Unpacking Wall Bracket and Hardware

1. Stand the shipping container on its bottom side on the floor.
2. Open the top side of the shipping container.
3. Remove the 3M Digital Easel and accessories from the shipping container.



### WARNING

#### To reduce the risk associated with muscle strain:

- Always use more than one person when installing or removing the 3M Digital Easel

4. Locate and remove the wall bracket and hardware.

 
### Installation for a Hollow Wall-Drywall

### ⚠ WARNING


- Install the 3M Digital Easel on a wall with 1/2-inch-thick drywall minimum.
- Use only 3M recommended wall mounting hardware.
- Follow all installation instructions carefully.
- Make sure mounting screws are properly sized to handle the weight of the 3M Digital Easel.
- Make sure mounting hardware is securely anchored to a solid structure.
- Proper installation must be performed by qualified service technicians, as outlined in the installation instructions. Failure to do so could result in serious injury and/or damage to the 3M Digital Easel.

1. Determine the desired location of the unit.
2. While holding the bracket in place, use a carpenter's level to ensure the proper level and then mark a minimum of two hole locations on the wall. Ensure that no studs are behind the hole locations.

*Note: Drawings may not depict actual hardware used.*

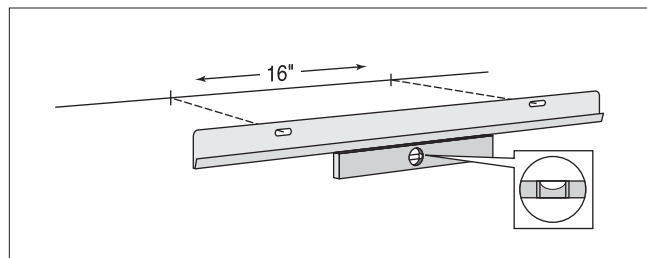


 3. Using a Phillips screw driver, screw the supplied anchors into the wall until they are flush with the wall surface using one for each identified hole location.

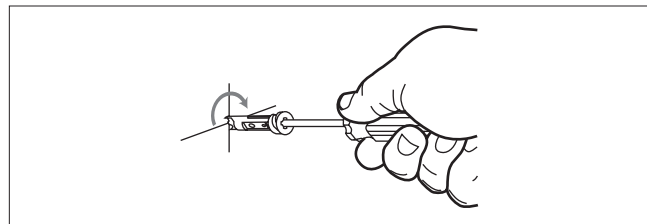

4. Align the wall bracket holes over the wall anchors and secure with the provided washer and anchor screws. Confirm that the wall bracket is level before tightening the screws.

 **Note:** For other types of wall material (e.g. wood, concrete, concrete block) use mounting hardware that is properly rated for the weight of the unit and is intended for specific wall material.

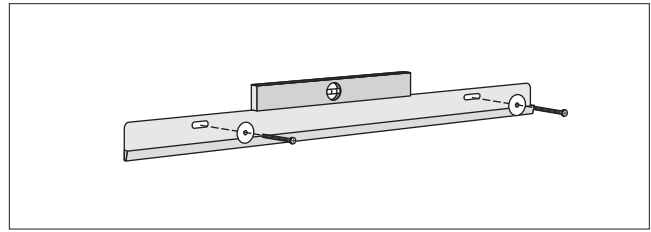

## Hanging on the Wall

1. If possible, position the 3M Digital Easel in front of the wall where the bracket is located. Position the unit on the floor on its backside so that the top is closest to the wall.
2. Clear the path from the unit to the wall where it will be hanging.

 


## WARNING


### To reduce the risk associated with muscle strain:

- Always use more than one person when installing or removing the 3M Digital Easel.


3. With one person holding each side of the unit, carefully lift it into position so that the bracket slot is above the wall hanger bracket and then lower into mating position onto wall hanger bracket. Ensure that the unit is securely in place before releasing.

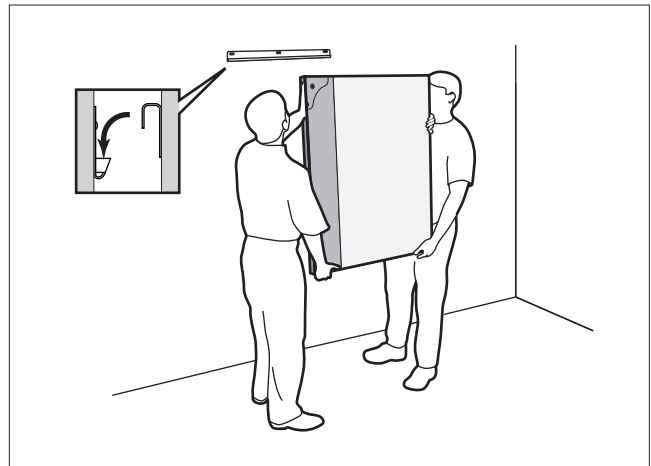

 4. Remove the “L” bracket from the bottom of the unit, and rotate it so that the half-round portion is flat against the wall. Align the bracket with the mounting hole, and mark the bracket hole location on the wall.

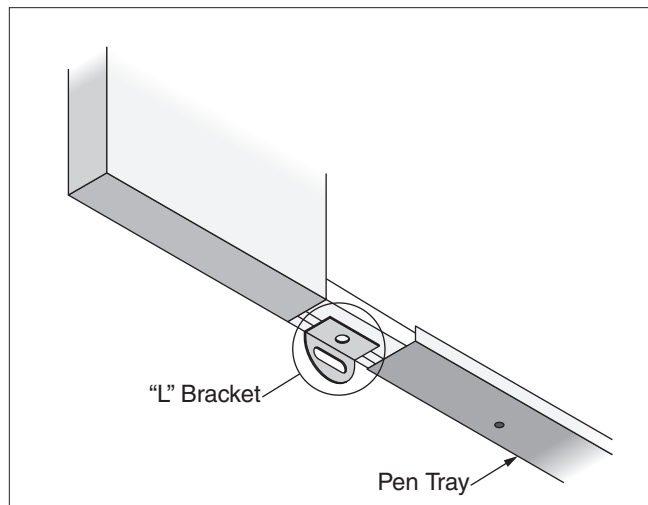

 5. Using a Phillips screw driver, screw the supplied anchor into the wall until it is flush with the wall surface for the identified hole location.

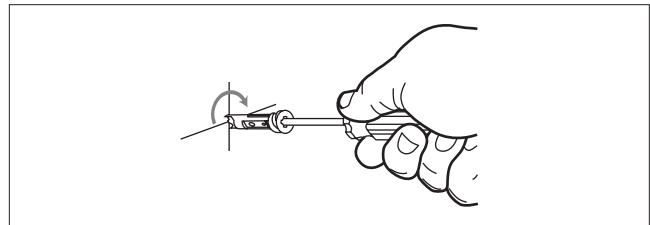

6. Secure the unit to the wall by attaching the “L” bracket to the 3M Digital Easel and wall using the provided washers and anchor screws.


The 3M logo and 3M are trademarks of 3M company.

### **Important Notice**

 All statements, technical information, and recommendations related to 3M's products are on information believed to be reliable, but the accuracy or completeness is not guaranteed. Before using this product, you must evaluate it and determine if it is suitable for your intended application. You assume all risks and liability associated with such use. Any statements related to the products which are not contained in 3M's current publication, or any contrary statements contained on your purchase order shall have no force or effect unless expressly agreed upon, in writing, by an authorized officer of 3M.

### **Warranty; Limited Remedy; Limited Liability**

This product will be free from defects in material and manufacture for a period of 90 days from the time of purchase. 3M MAKES NO OTHER WARRANTIES INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. If this product is defective within the warranty period stated above, your exclusive remedy shall be, at 3M's option, to replace or repair the 3M product or refund the purchase price of the 3M product. **Except where prohibited by law, 3M will not be liable for any indirect, special, incidental or consequential loss of damage arising from this 3M product, regardless of the legal theory asserted.**

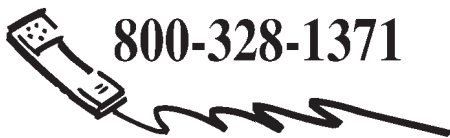

**800-328-1371**



**<http://www.3M.com/meetings>  
e-mail: [meetings@mmm.com](mailto:meetings@mmm.com)**

#### **3M Austin Center**

Building A145-5N-01  
6801 River Place Blvd.  
Austin, TX 78726-9000

#### **3M Canada**

P.O. Box 5757  
London, Ontario  
N6A 4T1

#### **3M Mexico, S.A. de C.V.**

Apartado Postal 14-139  
Mexico, D.F. 07000  
Mexico

#### **3M Europe**

Boulevard de l'Oise  
95006 Cerge Pontoise Cedex  
France

Litho in USA  
Copyright © 2005 3M  
All Rights Reserved  
78-6970-9432-0 Rev. A